

# 4G GPS tracking pendant



## Important! Please read below statements:

- Due to external factors all GPS devices have position error, so the position provided by this device just for reference.
- There may be delays caused by telecom operators at certain circumstance. Our company doesn't assume to take responsibility of loss causes by this.

## Main features:

- 4G LTE+2G GSM networks
- GPS + LBS +WIFI tracking ways
- Touch screen control the tracker's function
- SOS urgent call for help
- 2 ways phone call function
- Pill reminder and Pedometer
- Waterproof IPX7
- 1.3' LCD HD screen (240\*240pdi)
- Web platform/ Phone App for positions check
- 0.3 MP camera for photos
- Talking clock
- Low battery alarm
- Ringtone to find the pendant

## Product specification:

### Version A bands combination:

4G-FDD: Band 1/2/3/5/7/8/20  
4G-TDD: Band 38/39/40/41  
2G-GSM: Band 2/3/5/8

### Version B bands combination:

4G-FDD: Band 2/4/5/7/12/28A  
2G-GSM: Band 2/3/5/8

**GPS locating time:** 30sec with cold boot (open sky)  
29sec with warm boot (open sky)  
5sec with hot boot (open sky)

**GPS positioning accuracy:** 5-15m (open sky)

**WIFI positioning accuracy:** 15-100m(Under WIFI range)

**Working temperature:** -20°C ~ +70°C

**Working humidity:** 5% ~ 95% RH

**Host size:** 59(L)\*45.3(W)\*16(H)mm

**Host Net weight:** 41g


**Battery:**600mAh

## Accessories:

- 1\* GPS Tracker device
- 1\*Screw driver
- 2\*Lanyard
- 2\*Spare screws
- 1\* Magnetic USB cable
- 1\* User manual.
- 1\* Sim Card Ejector Pin
- 1\* Bracelet

## Step 1: Get a new SIM card

1. Get a new Nano SIM card as below instruction.
2. Activate the SIM card's Cellular data plan and Caller ID display function. (Tracking needs consume data, making phone calls also needs charges.)
3. Activate the VoLTE voice call function.

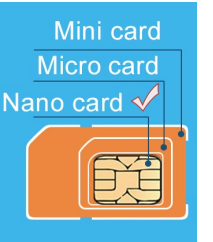

## Step 2: Learn your GPS Tracker



1. Please make sure the tracking pendant is powered off
2. Open the Sim slot with screw driver and insert a SIM card into the slot according to the direction in left diagram.
3. To ensure waterproof, please install the SIM slot cover

4G	4G Network OK	4G	APN data needs to set
2G	2G Network OK	2G	
X1	SIM card Network issue		SIM signal strength
	No SIM card or not read the SIM		Battery Status


## Step4: Operate the GPS pendant

- ✧ Press the SOS key, unlock the touch screen.
- ✧ Swipt touch screen with left and right, then you can get into the function menu , and click the menu icon then get in the function setting or active the function.

- ✧ Short press the SOS button, it will return to home page,short press the SOS button again,then lock the screen.

## ➤ Dialogue



- ✓**SOS help:** press and hold the SOS key for 3-5s, then the tracker will make call to 3 SOS numbers which preset via Apps.
- ✓**Call to phone book number:**Swipe the screen left and right and get into phone book icon, chose a number to make a call to the number.
- ✓**Call to number:** get into Dial page, type the number and make a call.
- ✓**Voice chat:** get into the voice chat page,hold the"Hold to talk" icon, and talking, release the icon,then the voice message will sent to App.
- ✓**Pick up incoming call:** Press the S key to pick up a

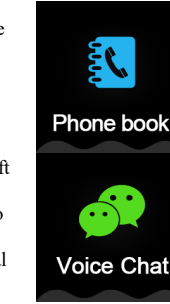

- incoming call;
- ✓**Reject a incoming call:**double click the S key,then reject the incoming call.

## ➤ Other functions on pendant

- ✓**Sedentary:** you can set the sedentary time remind here.When the tracker detect the user have no move,then it will remind the user should move.
- ✓**Camera:** you can take photo and store in the tracker's memory.
- ✓**Gallery:** you can check the photo here.
- ✓**App Down:** you can download the tracking App via scan the QR code.
- ✓**Volume:** Here you can adjust the voice volume.
- ✓**Settings:** you can configure GPS tracker setting here.

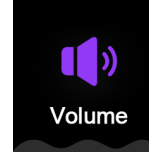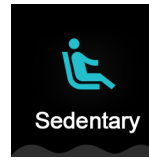

## Step 4: Install APP by Guardian


Our App can be installed by scanning the QR code in user manual or download from App store or Google play by searching “Anytracking”.

Web platform: [www.gps123.org](http://www.gps123.org); Same login way as the App.

## Step 5: Login App


Login the App with the 10 digits ID No. on back label, default password is 123456. (To monitor more pendants at the same time, please contact the seller for a user account.)

- **Real time tracking and interval for uploading:** Display the last location of GPS pendant. Press the icon on map upper right corner. Press the “interval for uploading” and choose different interval times. For fast locating, choose every 1 minute; To save battery, choose 10 minutes or longer options.
- **Historical route:** Display the historical route of any day in recent 90 days. You can choose whether to filter out LBS location data. (note:

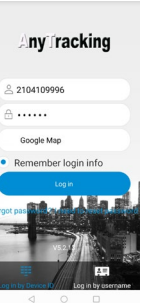

LBS means the location data indoors, the accuracy is not good.)

- **Geo-fence:** Includes GPS-fence and WIFI fence.
- **GPS-fence:** when the device gets into or out of the GPS-fence. The App will get alert. (note: we suggest the radius of GPS-fence over 300 meters to reduce false alerts.)
- WIFI-fence:** Please select 2.4G WiFi only for the WiFi fence as WiFi safe zones, when device leaves safe WiFi zones, the App will get alert.
- **Health:**
  - Health Step:** Turn on this from both App and pendant settings to get wearer’s motion status.
  - Pill Alarm:** Set medicine reminders accordingly.
  - Sedentary reminder:** Set long-time sitting reminder time period in App.
- **Conversation:**
  - Call to Tracker:** To call your pendant when click it; (This function works after filling in “Device phone number” in

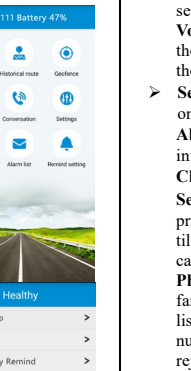

section of “About the device”.)

**Voice monitoring:** To request a one-way call from pendant to the phone number the user fills in and hear the sound around the pendant.

- **Settings:** All settings need to work when App shows device online by using the sim card’s data plan.

**About the device:** Check and edit tracker pendant’s information.

**Change password:** Change APP and Web platform’s password.

**Set SOS number:** Preset SOS numbers, when user long presses the SOS key, the tracker will call these 3 SOS numbers till one of them answers. If no number answers, tracker will call them twice cyclically.

**Phone book:** Set at most 15 family-numbers as coming-call white list in phone book. Calls from numbers out of this white list will be rejected by the pendant.

**Scene mode:** Set the alarm ways of pendant’s coming call, pill reminder, alarm clock, etc. There are four modes: Ringtone reminder, vibration reminder, ring & vibration reminder and no reminder.

**Safe mode:** When turns on, the pendant can only get through calls from SOS numbers or those in phonebook list.



**Answer mode:**

**Auto-answer:** Any numbers in white list can dial the pendant number. With two ringtones, the pendant user can talk with the caller.

**Push to answer:** Any numbers in white list can call the pendant and talk with its user after its power button is pressed once manually when a call comes.

**Clock alarm:** Set three different alarm modes accordingly.


**Talking clock:** Turn on or off the time telling.

**Fall down alarm switch:** Turn on or off fall sensor.

**Fall down level setting:** 6 sensitivities to choose, 0 is the most sensitive level. Please set accordingly. (Note: There are false alerts of fall down, please use it only for reference.)

**Find device:** After the command sent, the pendant will give out ringtone to guide the guardian to find pendant and the wearer fast.

**Device Language and time zone:** Set pendant SMS alerts’ language and time zone. Options are Chinese and English;

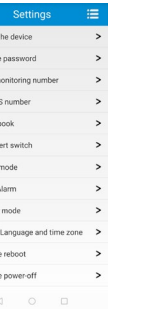

default time zone is +8.

**Remote reboot:** To reboot the pendant from this setting.


**Remote power-off:** To power-off the pendant remotely. (The pendant can be only turned on by manually after this setting. Please use with caution)

- **Photo:**

To request the pendant to take photos by App command.

- **Picture:**

To check photos taken when SOS alert was triggered and taken by App command.



## Step 6: Power off the pendant

When no SIM card in the pendant, long press the power button to power off it.

When a SIM card inside and signal OK, to avoid wrong operation, the pendant can be powered off only via App setting.

### FAQ:

**Q: After inserting a SIM card, it can get an SMS reply, but it displays “Not enabled” on the platform and APP.**

A: Please check the pendant SIM Card has LTE data plan.

**Q: Device shows online, but it shows “wait for the device responses” when you make settings with APP.**

A: a. Device SIM signal is not good;  
b. Device is busy in other process. Please wait some seconds and try again.

**Q: The location didn’t update in App map sometimes?**

A: a. Please take the pendant to open sky and click refresh button in App map to start a single location uploading;  
b. The pendant enters sleep mode to save battery when it keeps stationary. Move the pendant to activate it from sleep mode and refresh the location in App map.

**Q: The SIM card has 4G data plan, but the device still shows “Not enabled” or “offline”.**

A: It needs to configure APN data, since we have pre-programmed most SIM cards’ APN, but hasn’t. Find out your pendant SIM card’s APN name, APN user name, password, MCC and MNC codes before doing below settings. Please set main monitoring number first by sending below command from your own phone to the pendant sim number.  
**pw,123456,center,your own phone number#**  
After a reply, send below command to set APN into the pendant. The command is: **apn,apndata,user,password,MCC MNC code#**  
If user name and password are blank, please send the command

only keeping the commas as below way:

**apn,apndata,,,MCC & MNC code#**

(Note: The yellow parts are different for different SIM providers. No space in the command and all letters shall be in lowercase style in English language.)

**Q: Sometimes the WIFI fence has no alarm.**

A: a. The tracker pendant doesn’t support 5G WIFI. For android phone, please choose 2.4G WIFI hotspot as WIFI fence;  
b. IOS phone will choose the phone connecting WIFI for fence. If your phone connecting WIFI is a 5G one, please don’t set WIFI fence to avoid false alarm or no alarm situation.



Scan the QR code to download our free App